


ASSEMBLY INSTRUCTIONS FOR #65830 (FO24-DK887-16R-2)

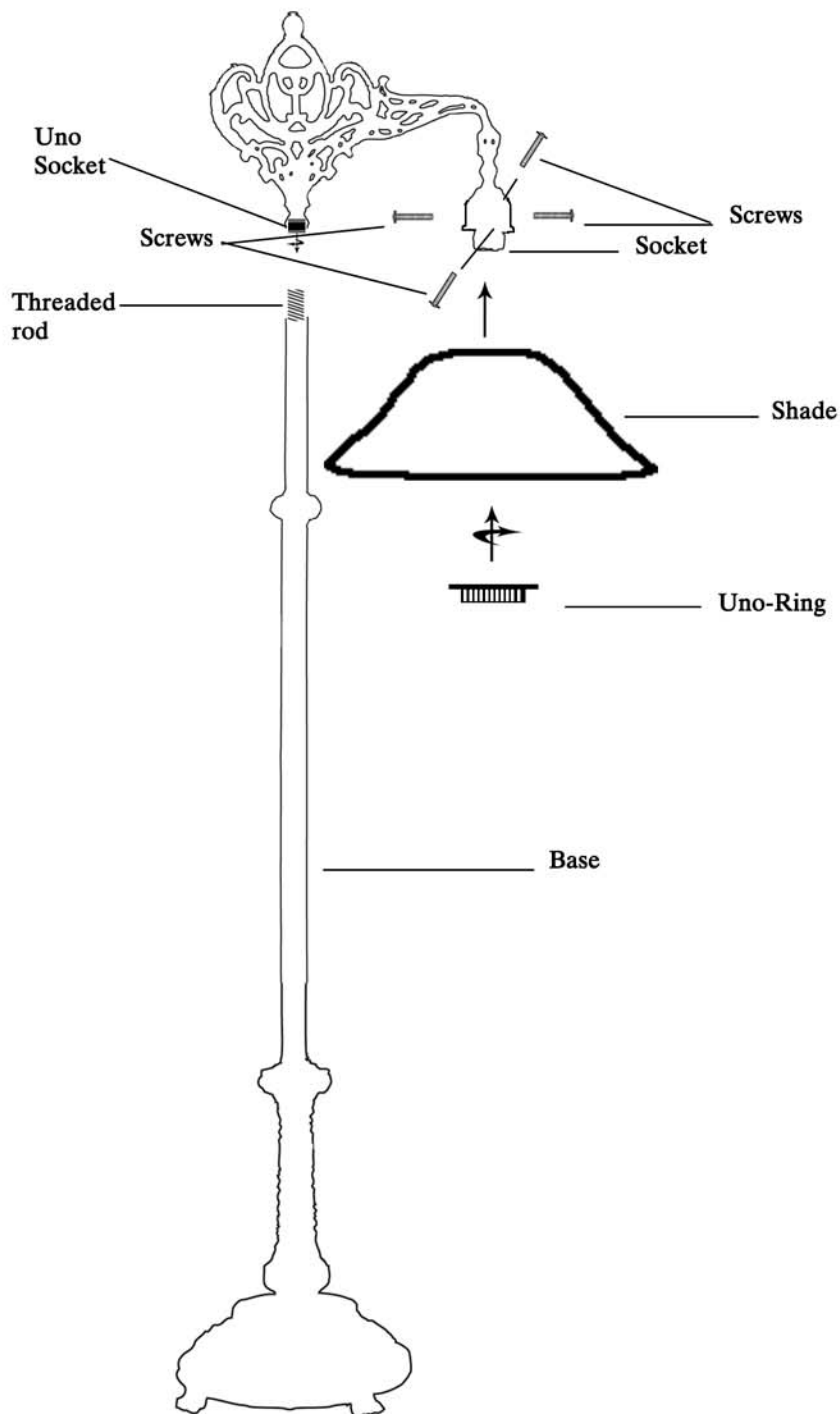

IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw top piece down onto the threaded rod located on the base.
2. Remove uno-ring from fitter socket, loosen (4) set screws from fitter hub.
3. Place shade up and over fitter socket.
4. Screw uno-ring onto fitter socket and tighten to shade.
5. Tighten fitter set screws into shade ring.
6. Screw light bulb into socket.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com