


# ASSEMBLY INSTRUCTIONS FOR #65839 (FO24-TR844-16R-1)

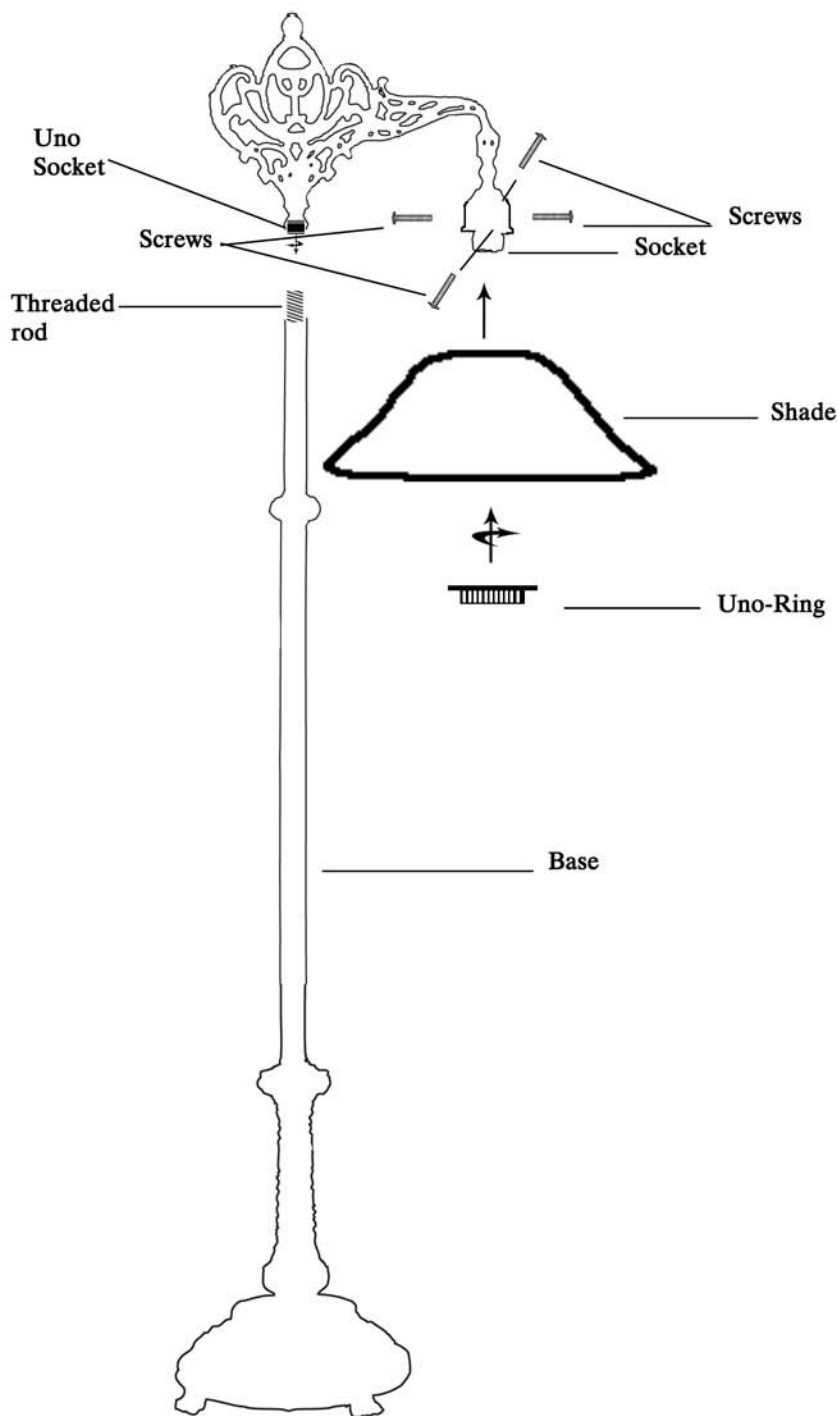

## IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw top piece down onto the threaded rod located on the base.
2. Remove uno-ring from fitter socket, loosen (4) set screws from fitter hub.
3. Place shade up and over fitter socket.
4. Screw uno-ring onto fitter socket and tighten to shade.
5. Tighten fitter set screws into shade ring.
6. Screw light bulb into socket.



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)