


ASSEMBLY INSTRUCTIONS FOR # 65841 (TR546-12R-1 FC11)

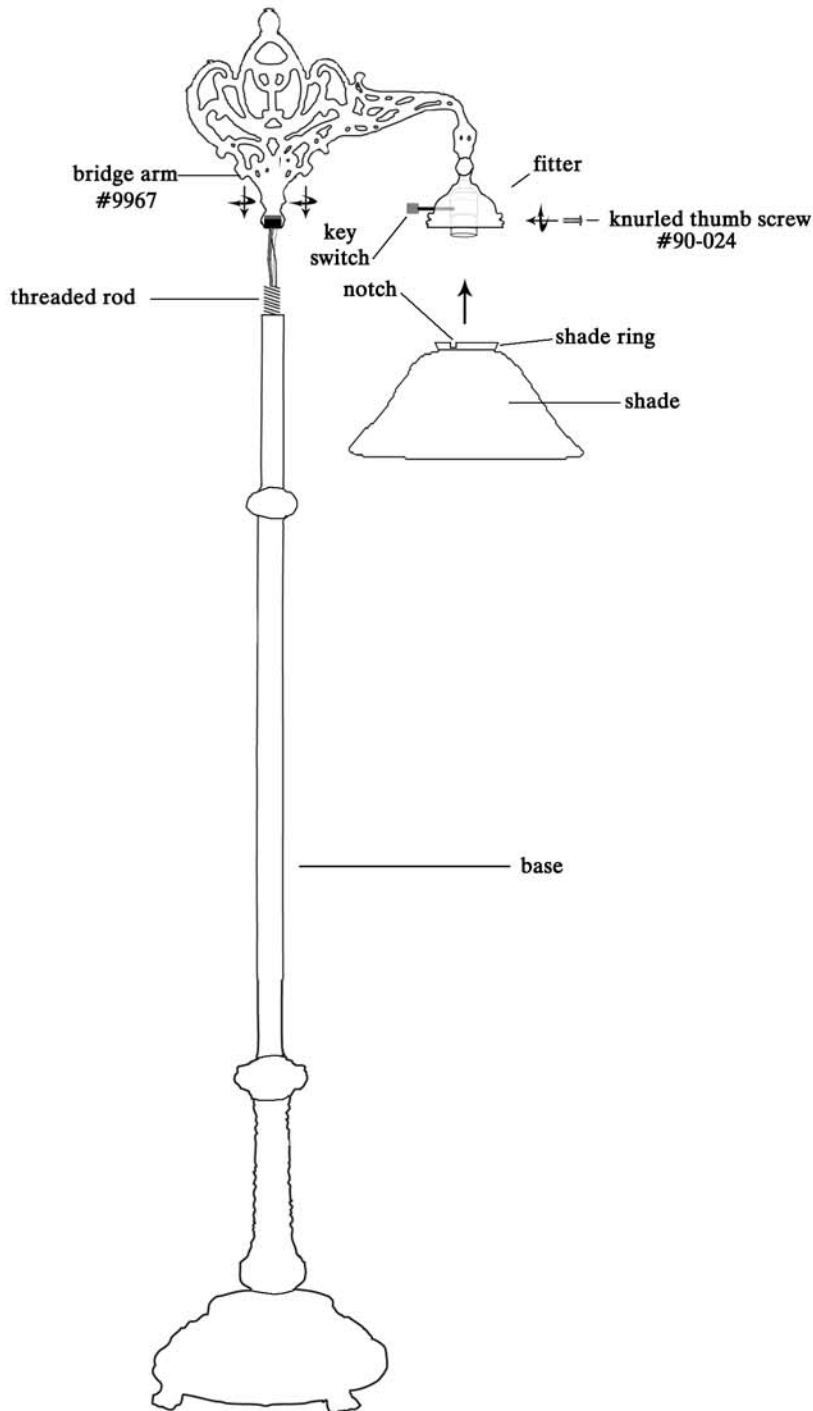

IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw bridge arm onto threaded rod on base.
 2. Loosen knurled thumb screws (3) on fitter.
Do not remove.
 3. Place shade up and into fitter, tighten knurled thumb screws to shade ring.
- * Make sure notch in shade ring aligns with key switch.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com