


ASSEMBLY INSTRUCTIONS FOR #65947 (SG339-07R-1-FIH)

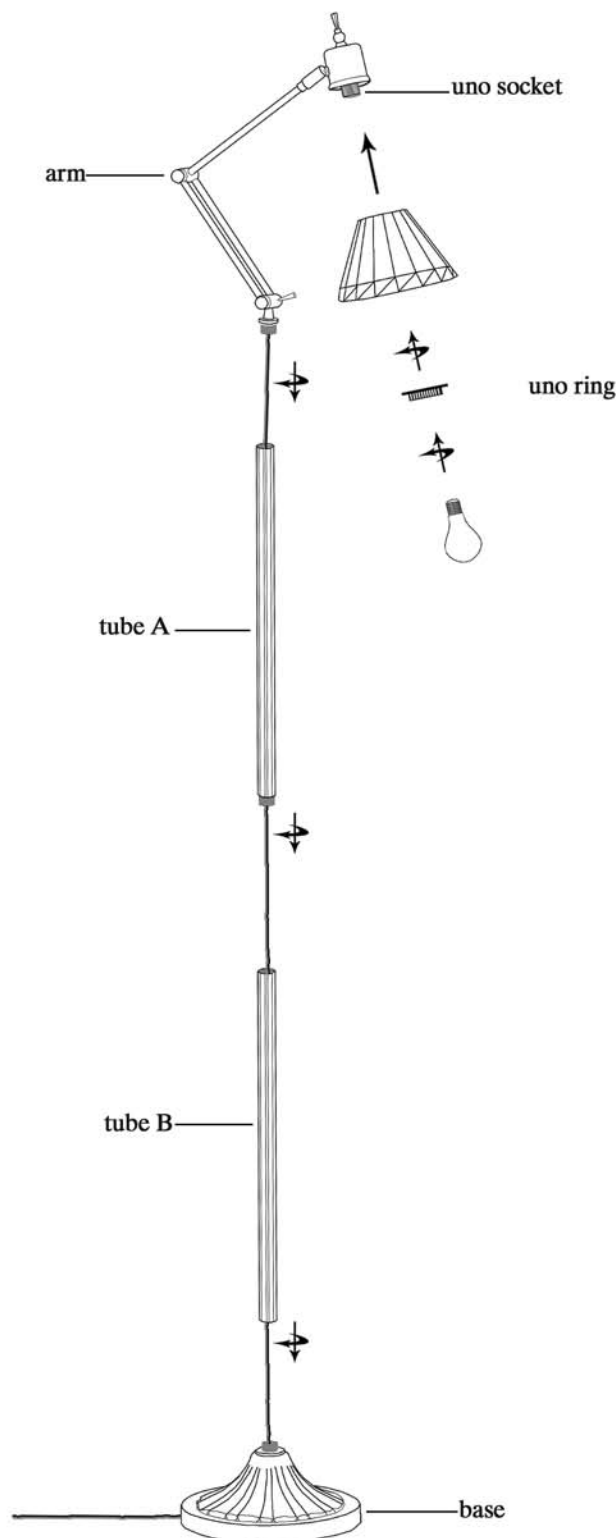

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw arm into tube A.
2. Screw arm and tube A into tube B.
3. Screw arm, tube A and tube B into base.
4. Place shade onto uno socket, screw uno ring onto uno socket and tighten to shade.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com