


ASSEMBLY INSTRUCTIONS FOR #65965 (M127-SG681-22-1)

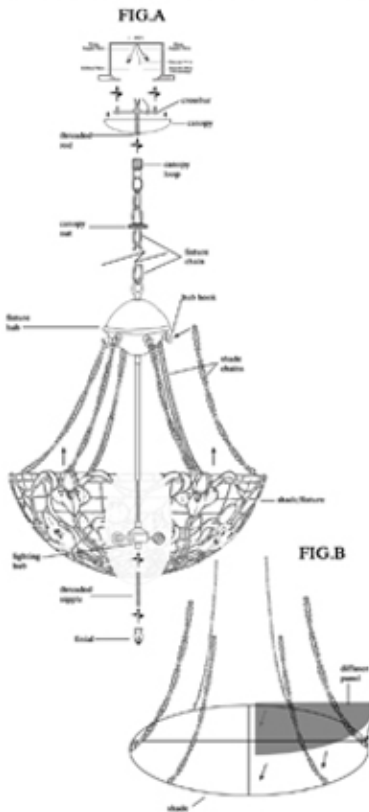

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw threaded rod into crossbar, attach crossbar to j-box.FIG.A
2. Place canopy & canopy nut onto fixture chain, screw canopy loop onto threaded rod.FIG.A
3. Determine length of chain required and attach one end to canopy loop, attach the other end of the chain to fixture hub loop.FIG.A
4. Place fixture wire through threaded rod, wire to j-box as per local elec. code.FIG.A
5. Screw canopy loop/fixture to threaded rod. Slide canopy up to ceiling and secure with canopy nut.FIG.A
6. Place bulbs into sockets, place diffuser panels into shade as shown. FIG.B
7. Attach shade chains to hub hooks as shown.FIG.A
8. Screw threaded nipple into bottom of lighting hub.FIG.A
9. Screw finial onto threaded nipple and tighten until shade chains are loose, shade chains are for shade balance only.FIG.A



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com