


ASSEMBLY INSTRUCTIONS FOR 68185 (1-0238035018L-13)

IMPORTANT

TURN OFF THE POWER AT THE MAIN
FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

1. Attach fixture wires to J-Box.
(Wire as per local electrical code).
2. Attach back plate to J-Box with
screws.
3. Place shade on back plate using
shade support bar.

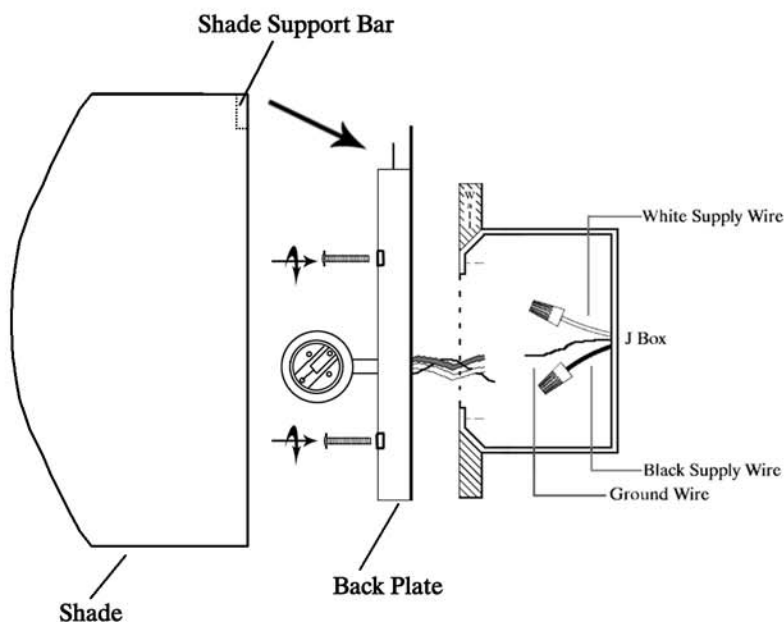

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com