


ASSEMBLY INSTRUCTIONS FOR ITEM #70176 (QWCC-6)

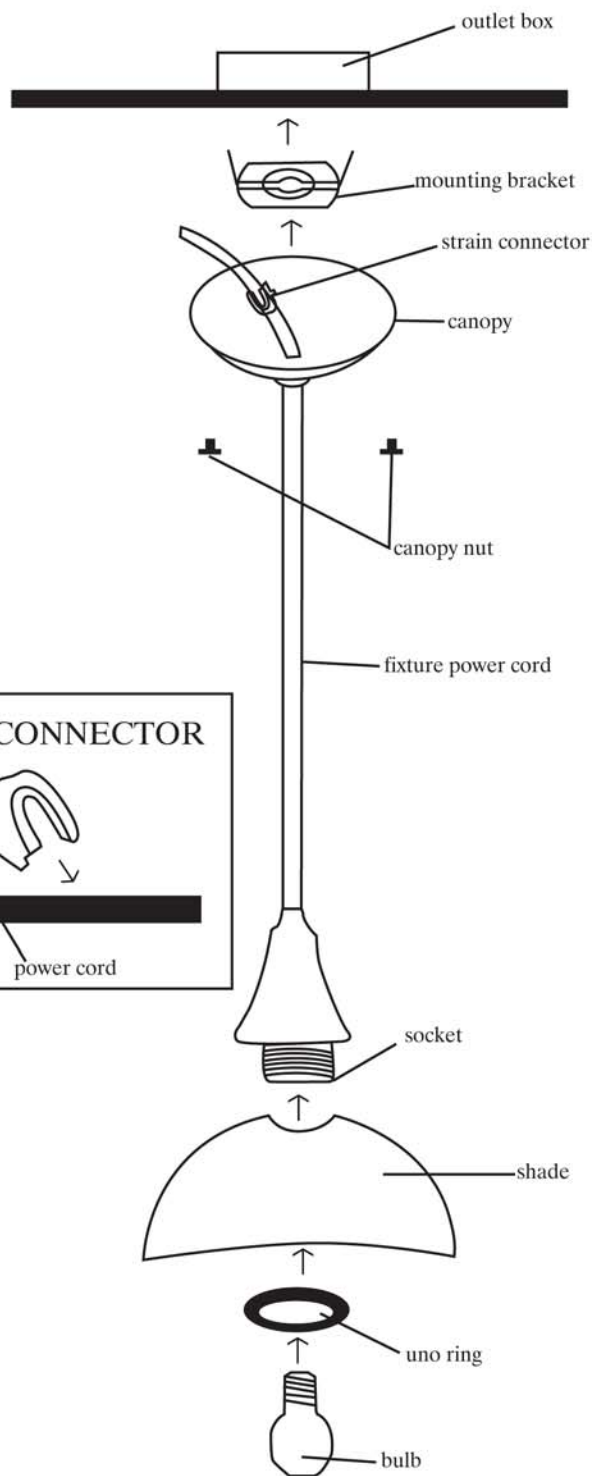

IMPORTANT

Turn off the power at the main fuse or circuit breaker box before starting installation.

Carefully unpack and identify all parts before assembly.
Bulbs are not included.

1. MOUNT WITH MINIMUM 1FT. OF POWER SUPPLY CORD BETWEEN THE CEILING CANOPY AND THE FIXTURE.
2. THE CORD LENGTH IS ADJUSTABLE. PLACE POWER SUPPLY CORD WITH FIXTURE TO CEILING AT DESIRED LENGTH AND MARK WITH MARKER.
3. SUBTRACT 3 1/2" FROM FIRST MARK ON POWER CORD AND REMARK POWER CORD.
4. PLACE POWER CORD THROUGH BOTTOM OF CANOPY. PLACE STRAIN RELIEF ON POWER CORD AT SECOND MARK AND CRIMP WITH PLIERS.
5. REMOVE REMAINING POWER CORD LEAVING 6" TO 10" OF POWER CORD ON FIXTURE.
6. FASTEN THE MOUNTING BRACKET TO THE OUTLET BOX USING THE 2 SCREWS PROVIDED WITH THE OUTLET BOX.
7. MAKE ELECTRICAL CONNECTIONS. CONNECT THE WHITE WIRE FROM THE FIXTURE TO THE WHITE WIRE OF THE SUPPLY CIRCUIT. CONNECT THE BLACK WIRE FROM THE FIXTURE TO THE BLACK WIRE OF THE SUPPLY CIRCUIT. CONNECT THE GREEN (OR BARE COPPER) COLORED WIRE FROM THE FIXTURE TO THE GROUNDING CONDUCTOR OF THE SUPPLY CIRCUIT. USE UL LISTED WIRE CONNECTORS SUITABLE FOR THE SIZE, TYPE AND NUMBERS OF CONDUCTORS. NO LOOSE STRANDS OR LOOSE WIRES SHOULD BE PRESENT. SECURE WIRE CONNECTORS WITH UL LISTED ELECTRICAL TAPE.
8. SPREAD THE ELECTRICAL SPLICES SO THAT BLACK WIRES ARE ON ONE SIDE OF OUTLET BOX AND WHITE WIRES ARE ON THE OTHER SIDE.
9. WIRE AS PER LOCAL ELECTRICAL CODE.
10. PLACE SHADE ONTO SOCKET AND SECURE WITH UNO RING.
11. PLACE BULB IN SOCKET; RESTORE ELECTRICITY AND CHECK THE OPERATION OF YOUR NEW LIGHTING FIXTURE.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009
MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET
visit us on the web at www.meyda.com