


ASSEMBLY INSTRUCTIONS FOR # 70806

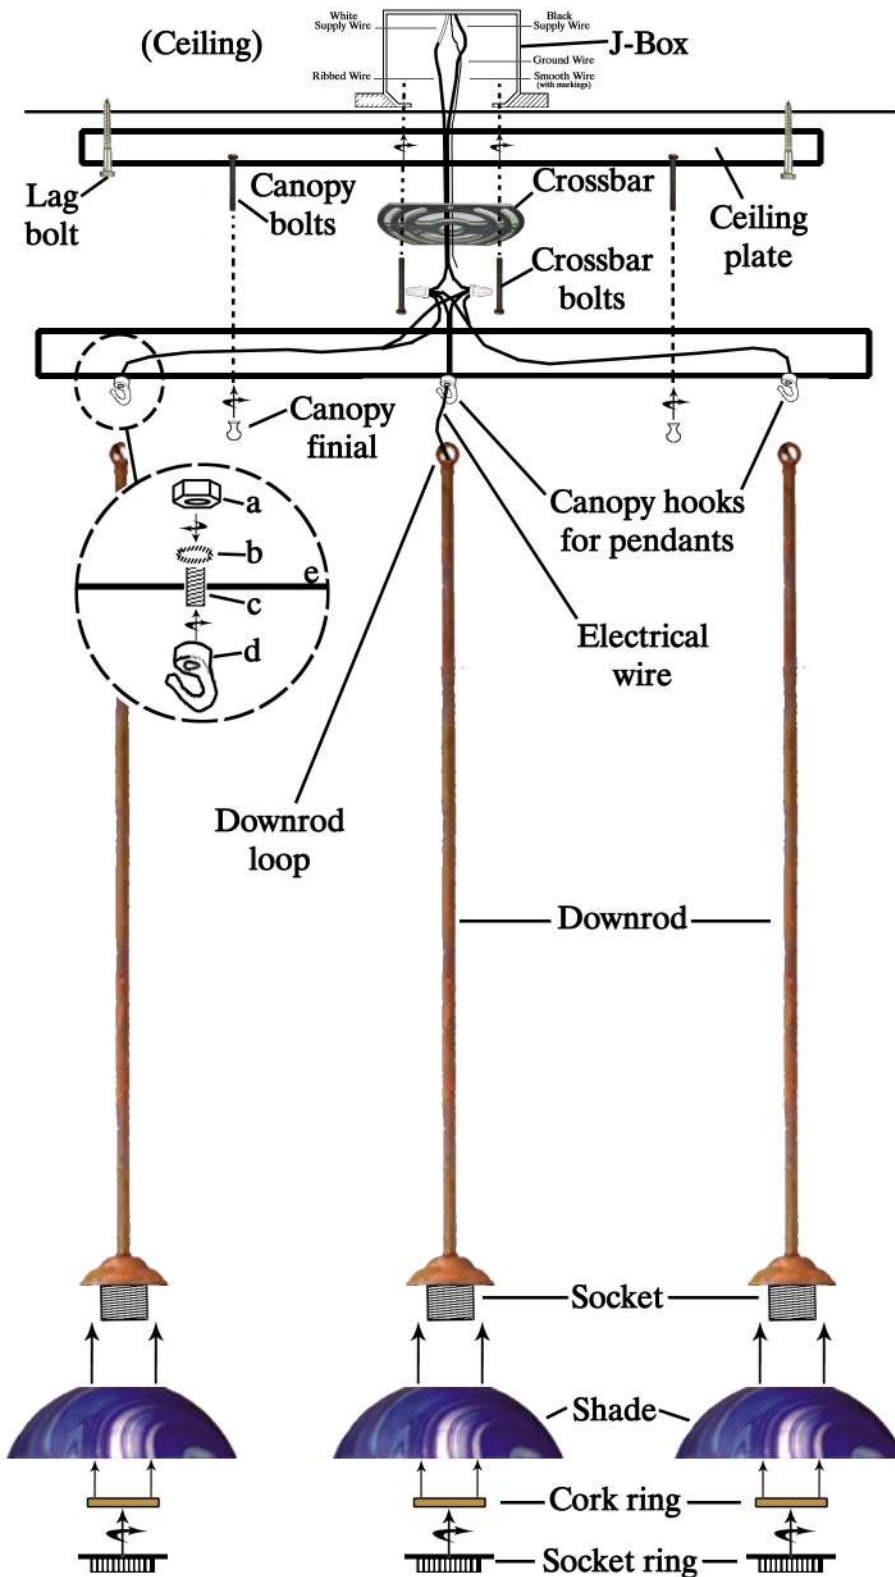

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

- 1.) Your ceiling plate should have two canopy bolts pointing down to receive canopy. Place your ceiling plate to your ceiling allowing J-Box electrical wires to hang down through ceiling plate. Secure ceiling plate to ceiling using the crossbar and crossbar bolts provided. Screw the bolts into the J-Box, you may also use lag bolts for extra support.
- 2.) Attach hooks to canopy if they are not already: screw nipple(c) into hook(d), push nipple and hook into canopy(e), secure with a spider washer(b) and nut(a).
- 3.) Connect your three downrods to canopy by first running the electrical wire through the canopy hooks & canopy. Loop the downrod onto the hooks.
- 4.) Bring canopy with three downrods attached, to ceiling plate. Connect the three pendant wires to the J-Box wires as per local codes. Slide canopy onto ceiling plate bolts & screw the canopy finials onto the two bolts.
- 5.) Slide shades up onto the sockets, and secure in place with the cork ring and then socket ring.
- 6.) Bulb your fixture, power on, enjoy!
- 7.) Have a Meyda Fine Day!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com