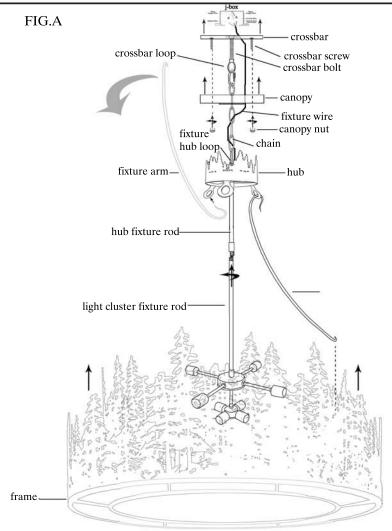
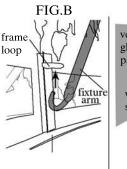
ASSEMBLY INSTRUCTIONS FOR #81179 (1-0253063007-2)







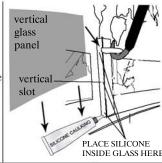


FIG.C



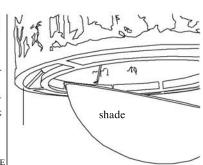

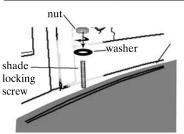

THIS FIXTURE WEIGHS OVER 50 LBS.

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

- 1. Attach crossbar to structure as per local code.
- 2. Screw crossbar loop onto crossbar bolt, screw light cluster fixture rod into hub fixture rod. FIG.A
- 3. Attach chain to fixture hub loop with quick link. Place canopy onto chain,

uick

link. FIG.A

4. Place fixture wire through hole in canopy located aprox. 2" from the center hole cal

code.

- 5. Slide canopy to ceiling and onto crossbar G.A
- 6. Attach fixture arms to hub. FIG. A
- 7. Place frame up and attach to fixture arms with frame loop. FIG. B
- 8. Place vertical glass panels into vertical slots. Silicone vertical panels into place (silicone is provided). FIG. C
- 9. Place shade into frame. FIG. D
- 10. Place washers and screw nuts onto shade locking screws. FIG. E
- 11. Place horizontal glass panels into horizontal frame openings. FIG. F

CAUTION: DO NOT FORCE VERTICAL GLASS PANELS INTO PLACE.

Each glass panel is hand cut and hand bent. Rotate panels in openings until each panel fits smoothly into place than apply silicone as shown in FIG. C.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009 MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET visit us on the web at www.meyda.com