


ASSEMBLY INSTRUCTIONS FOR #81627 (QVA5-48-2-QB212-09R)

FIG.A

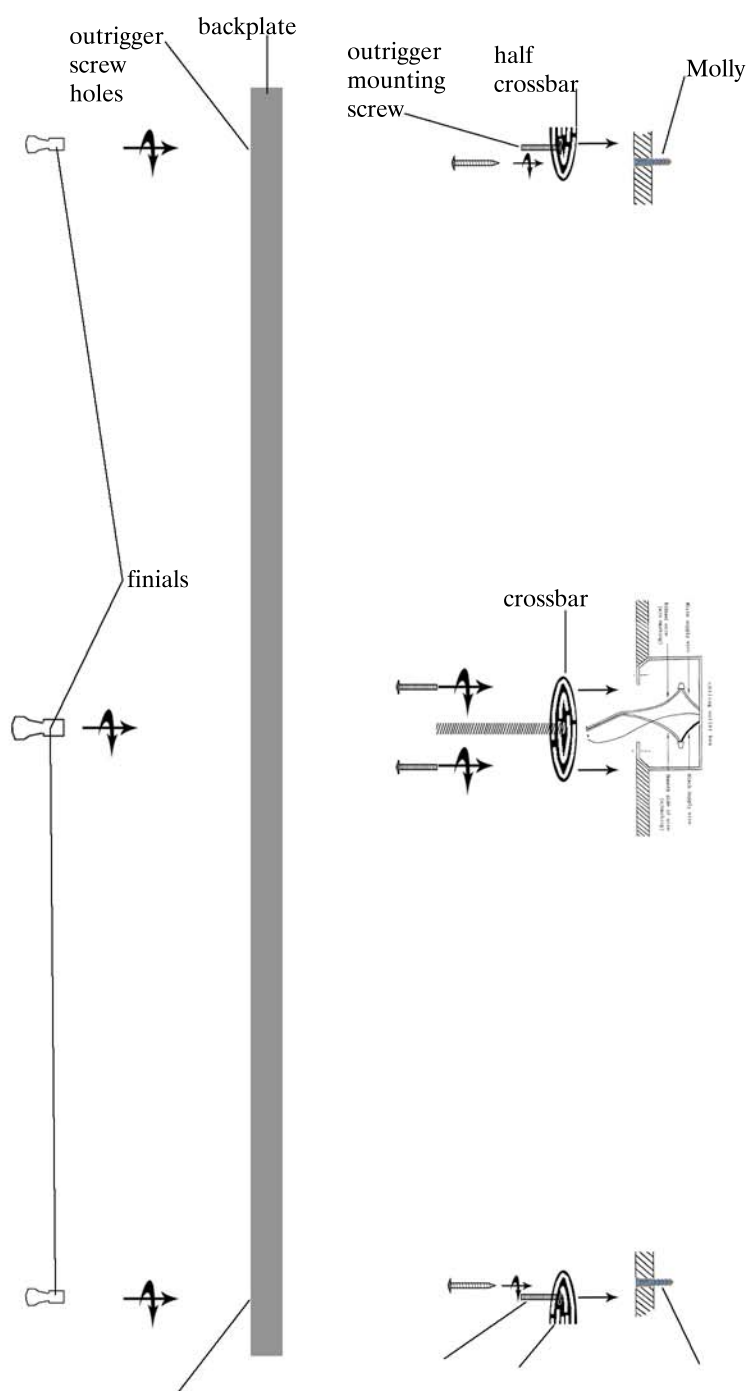

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION


CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw crossbar into j-box, screw mollies into wall (align mollies to outrigger screw holes), screw half crossbar into mollies, make sure outrigger mounting screws are facing outward and line up to outrigger holes in backplate. FIG.A
2. Wire as per local electrical code.
3. ith

finials.

Place shade into shade caps and secure with thumb screws. FIG.B

FIG.B

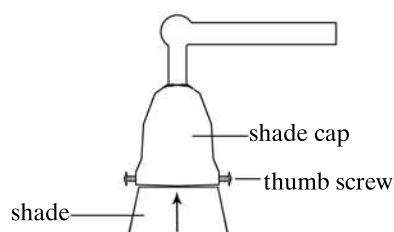

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com