

# ASSEMBLY INSTRUCTIONS FOR #1-0328045207-47 (81815)


## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

**THIS FIXTURE WEIGHS OVER 50 LBS.** NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

- 1.) Attach crossbar to j-box with customer provided screws.
- 2.) Hold up canopy and wire to j-box as per local electrical codes.
- 3.) Secure canopy to secure location using hanger bolts provided.
- 4.) Install light bulbs into light clusters.
- 5.) Install side glass panels into shade frame. ( Both the glass pieces and shade frame are labeled for positioning)
- 6.) Raise up shade to canopy and secure with button head screws provided.
- 7.) Slide bottom glass panels up through bottom of shade frame. (These panels are removable for re-lamping purposes)

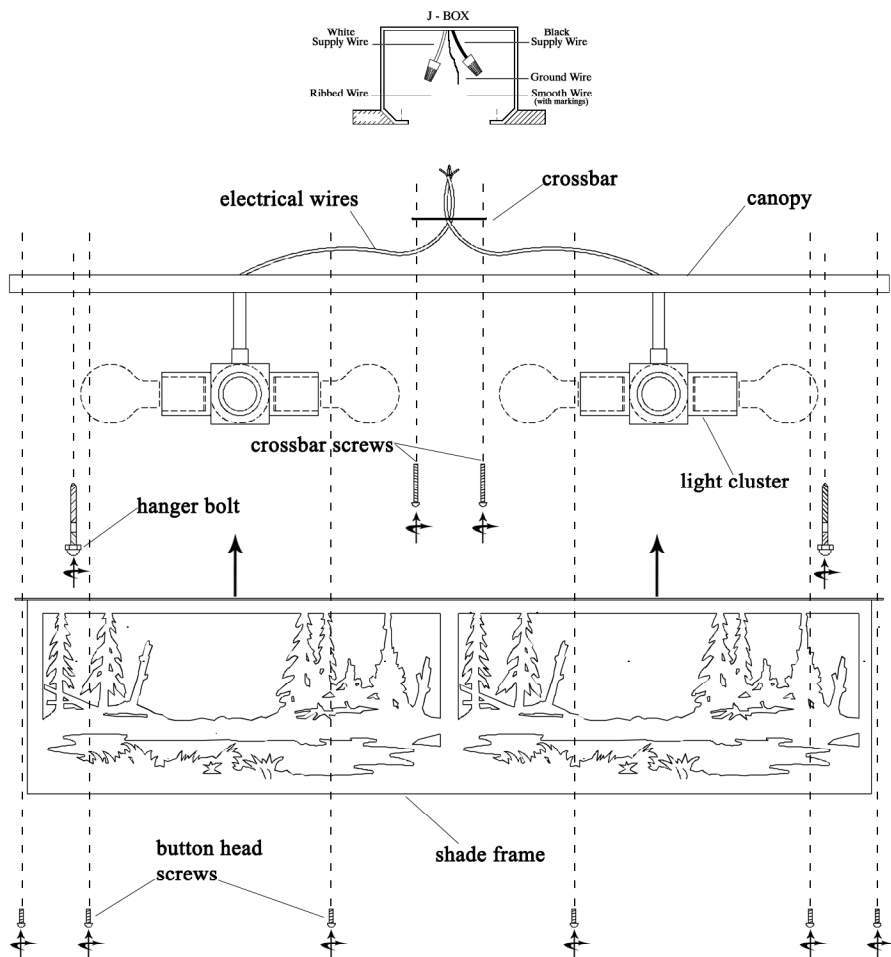

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)