


ASSEMBLY INSTRUCTIONS FOR #82313 MS553-18-1-RDZ20

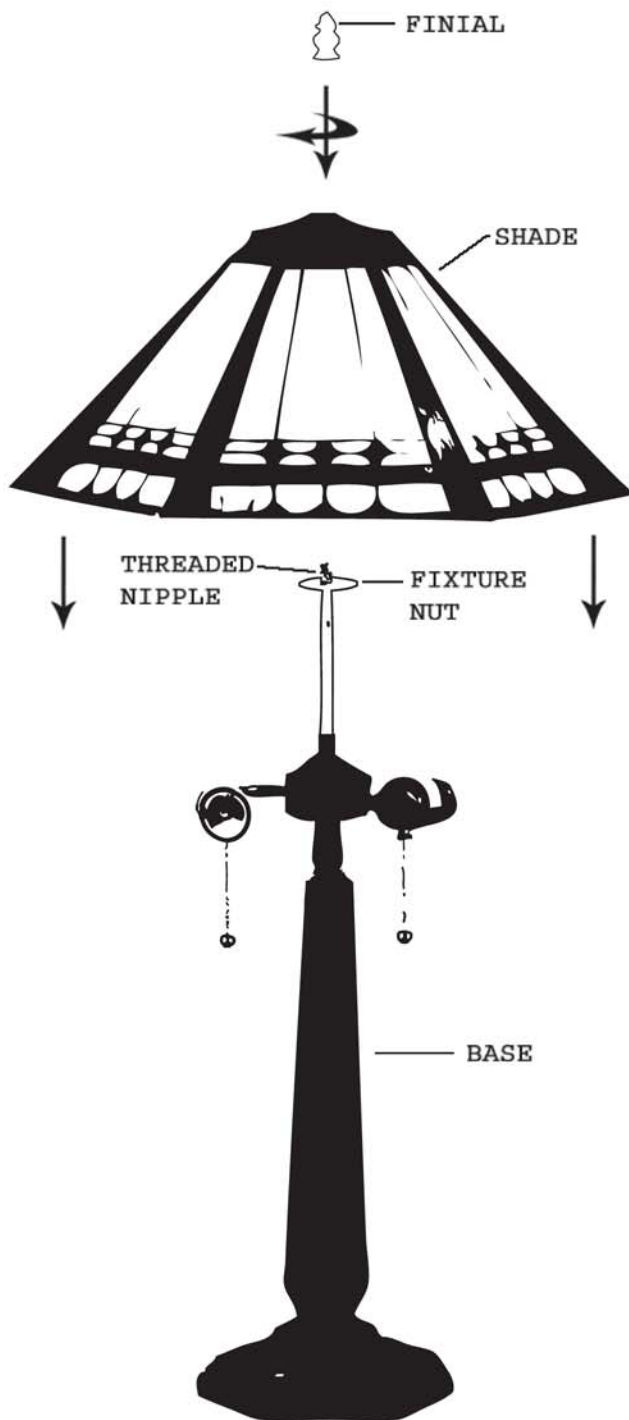

IMPORTANT
 CAREFULLY UNPACK AND IDENTIFY
 ALL PARTS BEFORE ASSEMBLY.
 BULBS ARE NOT INCLUDED

1. Place shade onto threaded nipple and seat to fixture nut.
2. Screw finial onto threaded nipple.
3. Screw light bulbs into socket.
4. Plug lamp into wall outlet, turn on and ENJOY!



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com