


ASSEMBLY INSTRUCTIONS FOR #82737 (Comp #1-0069063110-2-3600-16-1)

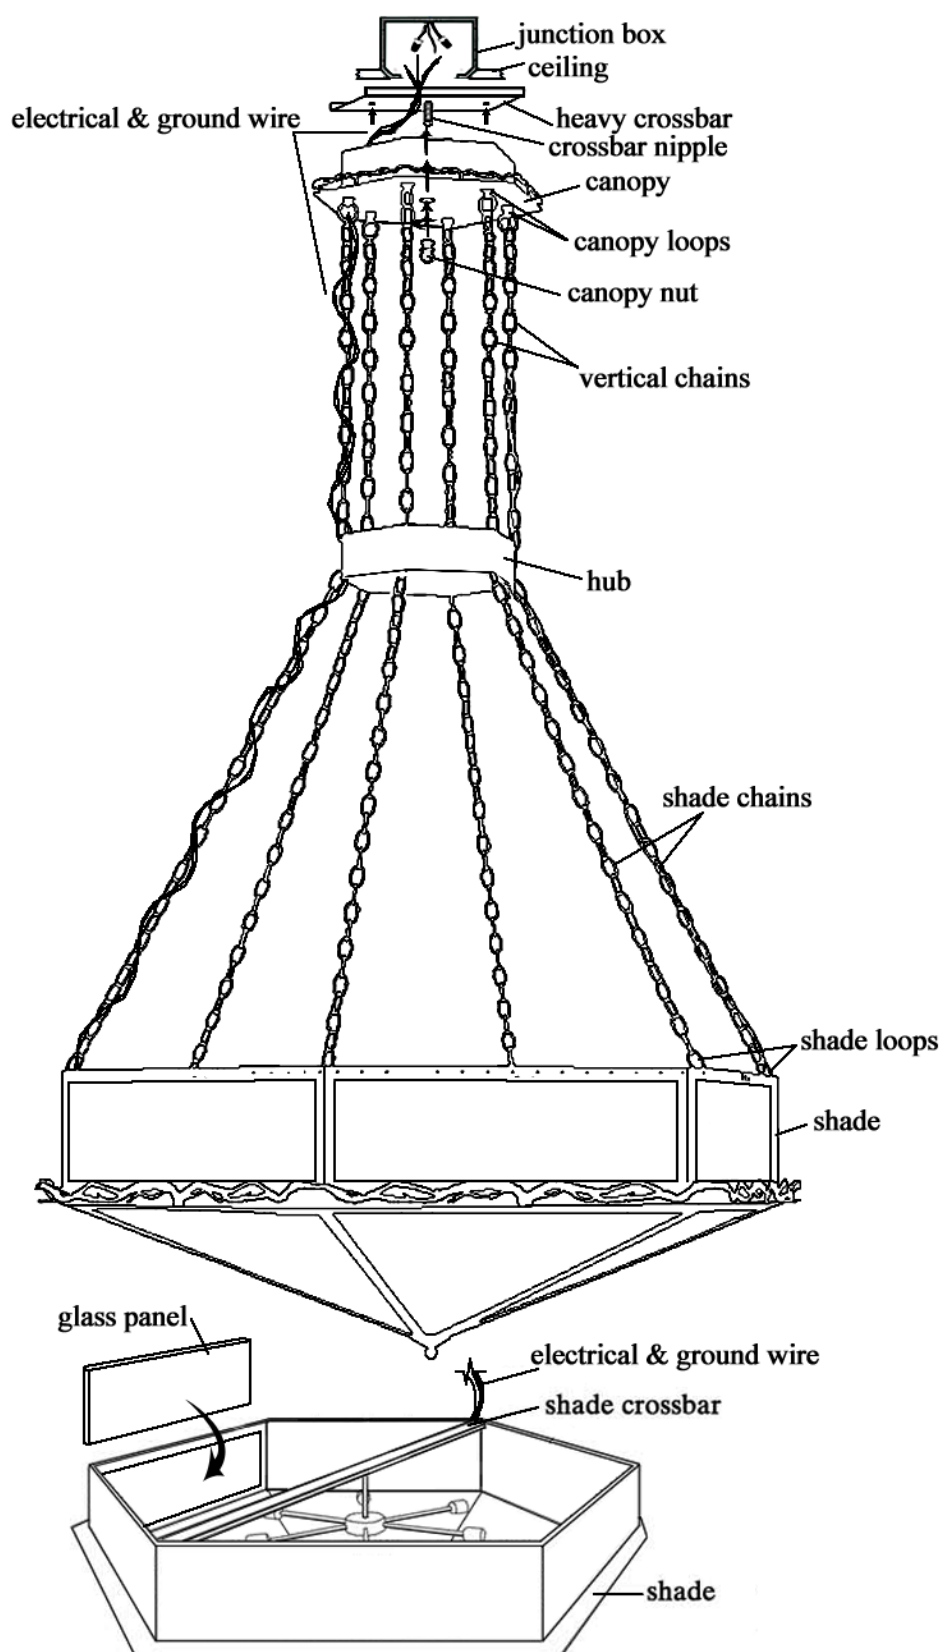

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

* THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

1. Place glass panels into shade as marked.
2. Connect shade chains to shade loops.
3. Run electrical & ground wires from shade crossbar up through shade chains (every 4th link), hub, vertical chains, canopy loop & canopy loop & canopy.
4. Attach crossbar to suitable location*

* THIS FIXTURE WEIGHS OVER 50 LBS. NEC:314.27B, A luminaire that weighs more than 23kg (50lb) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM weight to be supported.

5. Wire as per local electrical code.
6. Place fixture up and onto crossbar and crossbar nipple, and secure with canopy nut.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com