

ASSEMBLY INSTRUCTIONS FOR #98959 (MS554-40-1-M250)

FIG.A


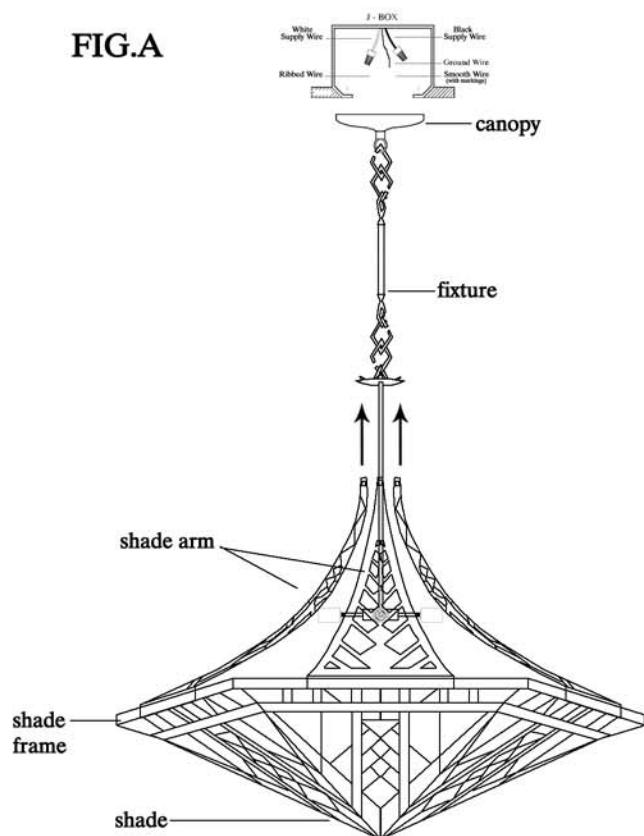


FIG.B

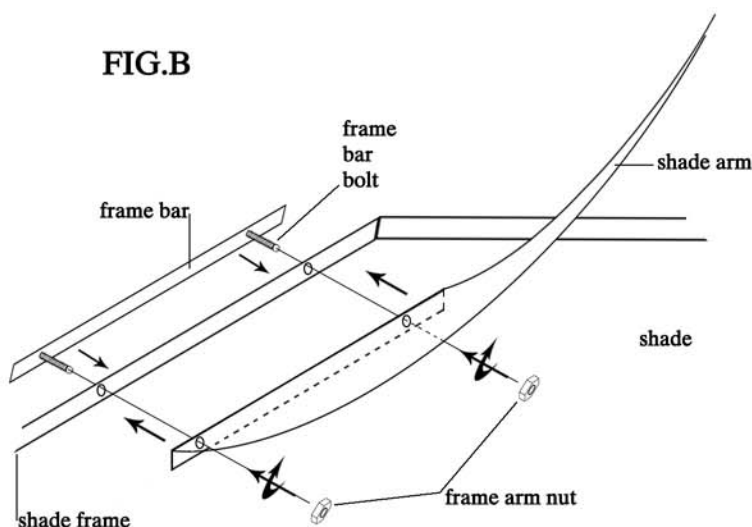

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

THIS IS A 2 PERSON JOB.

1. Wire fixture to J-box. as per local electrical code.
 2. Screw canopy to J-box. FIG.A
 3. Place shade into shade frame.
 4. Place frame bar into shade frame. FIG.B
 5. Place shade arm onto frame bar bolts. Screw frame arm nut onto frame bar bolts and tighten. FIG.B.
 6. Repeat steps 4 & 5 with remaining shade arms.
 7. Lift complete shade with shade arms up to fixture hub, place one shade arm at a time onto hub hooks. FIG.B
- TIP:** After placing first shade arm onto hub hook place second shade arm onto opposite hub hook. Continue attaching shade arms onto opposite hub hooks.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com