

ASSEMBLY INSTRUCTIONS FOR #98965(SG640-13-1-M245B)

FIG.A


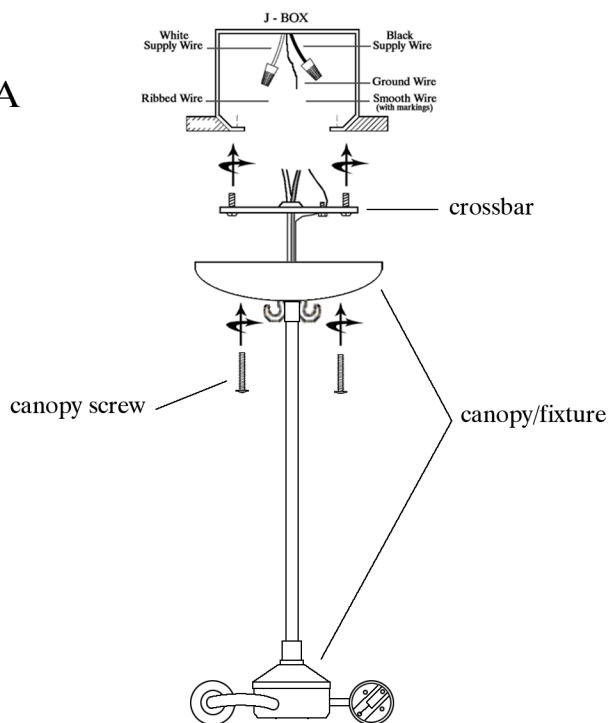


FIG.B

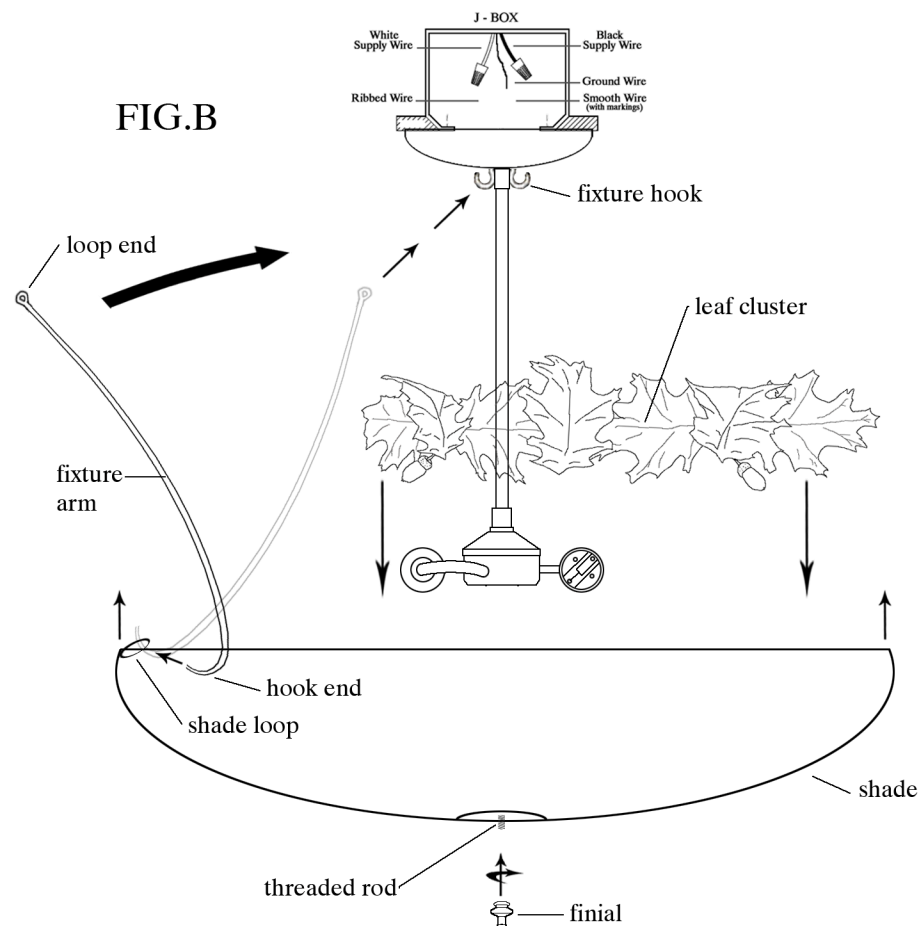

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to jbox.
2. Wire as per local electrical code.
3. Place canopy/fixture up and screw into crossbar. FIG.A
4. Attach finial to threaded rod at vase cap. FIG.B
5. Place hook end of fixture arm through shade loop, place loop end of fixture arm onto fixture hook. FIG.B
6. Hook leaf cluster onto top edge of shade. FIG.B



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com