


# ASSEMBLY INSTRUCTIONS FOR 99277 (Q21-12-5010-QSSC1-37)

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw threaded rod into crossbar, screw crossbar nut onto threaded rod and to crossbar.
2. Screw crossbar to j-box.
3. Wire as per local electrical code.
4. Place back plate onto threaded rod, screw back plate nut onto threaded rod and tighten to back plate.
5. Screw light bulb into socket.
6. Place rubber washer onto post A, place diffuser onto post A, screw fixture nut onto post A and tighten to diffuser (DO NOT OVER TIGHTEN).
7. Place shade onto post B, repeat step 6.

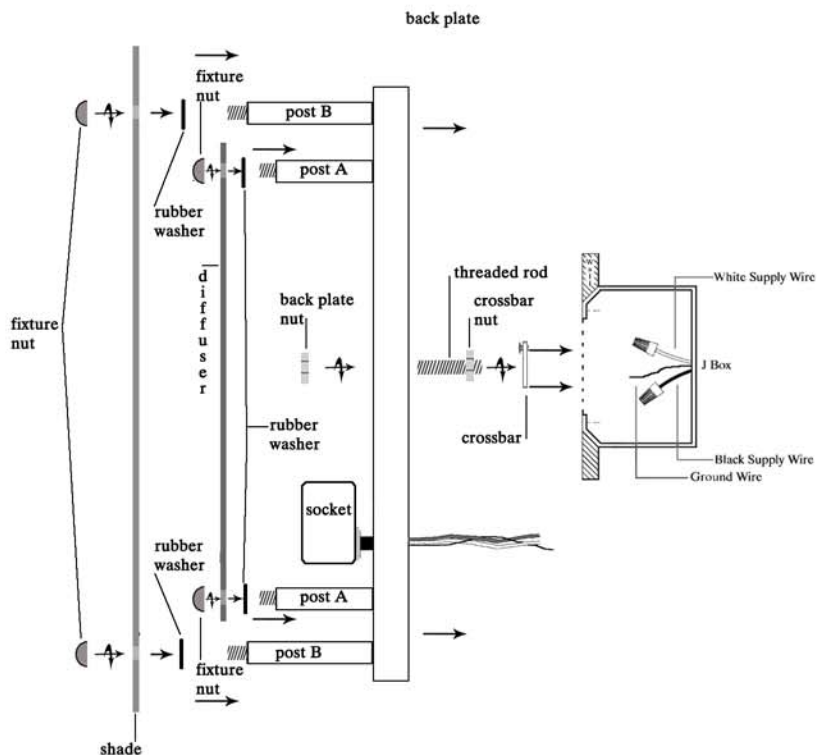

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)