


ASSEMBLY INSTRUCTIONS FOR #99720 (38667-19)

IMPORTANT
TURN OFF THE POWER AT THE MAIN
FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL
PARTS BEFORE ASSEMBLY. BULBS ARE
NOT INCLUDED

1. Screw crossbar to j-box.
2. Remove square finial and faceplate.
3. Wire as per local electrical code.
4. Screw sconce into crossbar.
5. Place face plate to sconce, make sure center hole aligns with threaded rod and faceplate tabs seat to sconce.
6. Screw square finial onto threaded rod and tighten to face plate.

✱ For outdoor use apply silicone as per local building code. Apply liberal amount of silicone around the entire back edge of the back plate (where the back plate comes in contact with the existing wall).

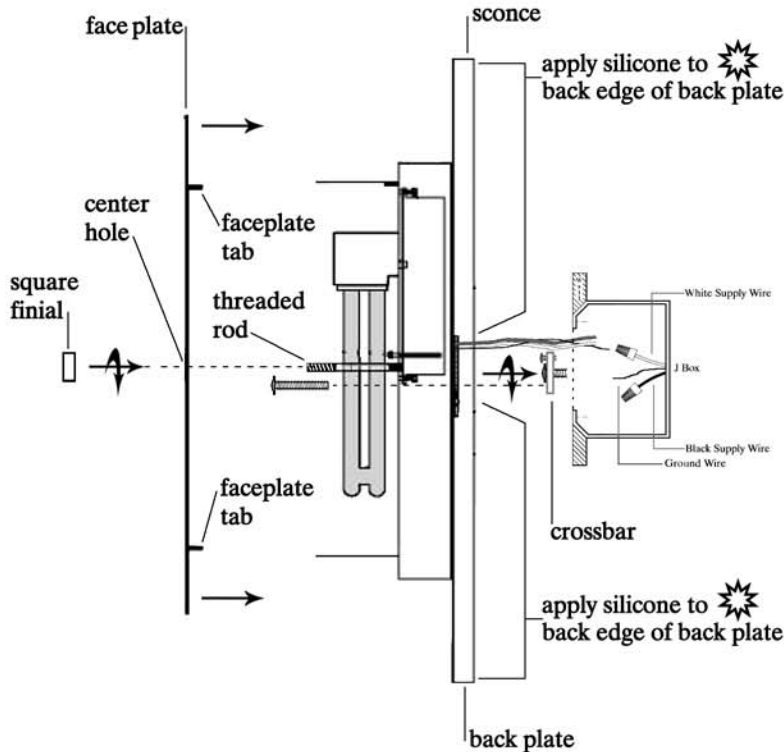

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com