


ASSEMBLY INSTRUCTIONS FOR #99721 (38667-20)

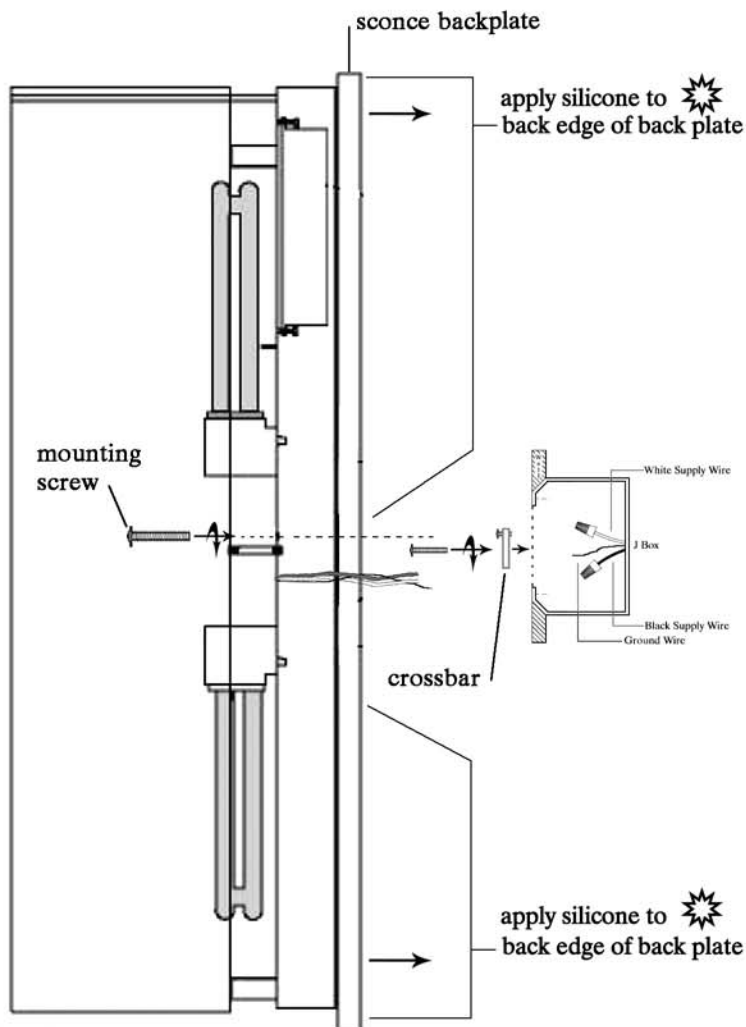

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Attach crossbar to j-box.
2. Wire as per local electrical code.
3. Screw mounting screw through sconce back plate and into crossbar.

✱ For outdoor use apply silicone as per local building code. Apply liberal amount of silicone around the entire back edge of the back plate (where the back plate comes in contact with the existing wall).



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com