

ASSEMBLY INSTRUCTIONS FOR #99825

QWSC3-24-100-QWB-1SBCD


IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY.

REMOVE BUBBLE WRAP FROM INSIDE AND OUTSIDE OF SHADES ONLY AFTER FIXTURE INSTALLATION IS COMPLETE.

1. Screw crossbar into j-box.
2. Wire as per local electrical code.
3. Place scone back plate onto crossbar screws (make sure that approx. 1/4" of crossbar screw will protrude from face of scone back plate).
4. Screw ball nuts onto crossbar screws and tighten to scone back plate.

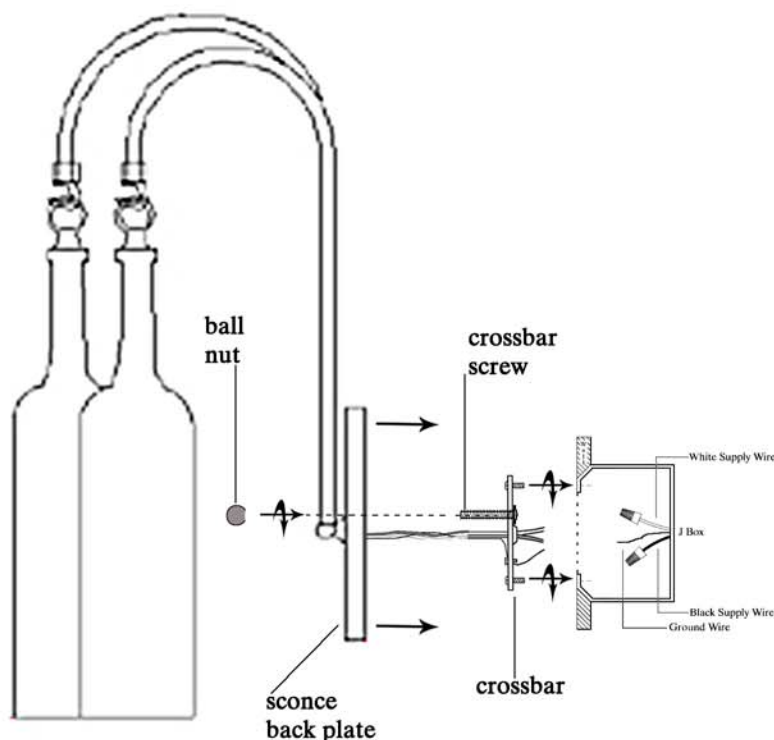

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com