
NEC:314.27B, A luminaire that weighs more than 23kg (50lbs.) shall be supported independently of the outlet box unless the outlet box is listed AND MARKED for the MAXIMUM WEIGHT to be supported.

## **ASSEMBLY INSTRUCTIONS FOR #182292**



Globe

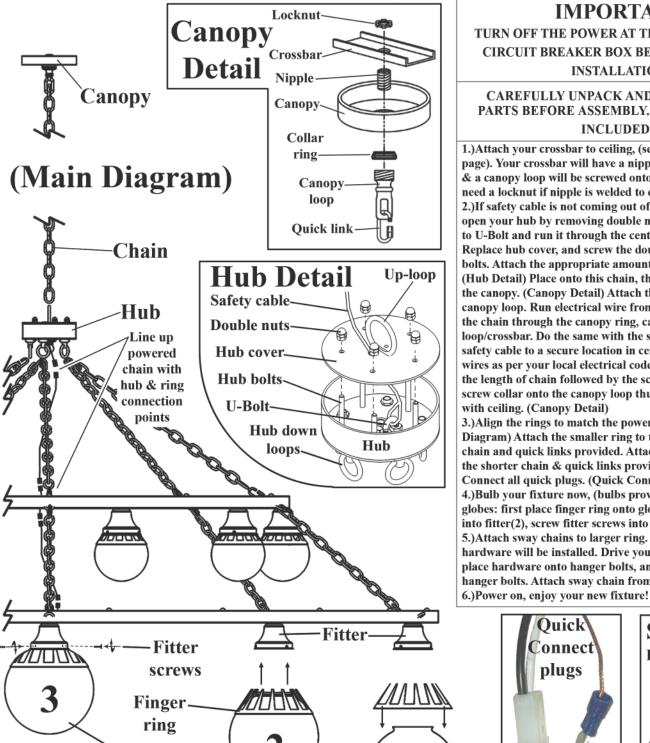


TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY, BULBS ARE NOT

1.) Attach your crossbar to ceiling, (see warning at top of page). Your crossbar will have a nipple through the crossbar, & a canopy loop will be screwed onto the nipple. You will not need a locknut if nipple is welded to crossbar. (Canopy Detail) 2.) If safety cable is not coming out of hub cover you need to open your hub by removing double nuts. Attach safety cable to U-Bolt and run it through the center hole next to up-loop. Replace hub cover, and screw the double nuts onto the hub bolts. Attach the appropriate amount of chain to the up-loop. (Hub Detail) Place onto this chain, the collar ring followed by the canopy. (Canopy Detail) Attach the top of the chain to the canopy loop. Run electrical wire from hub up the length of the chain through the canopy ring, canopy, & canopy loop/crossbar. Do the same with the safety cable. Attach safety cable to a secure location in ceiling. Attach electrical wires as per your local electrical code. Run your canopy up the length of chain followed by the screw collar. Screw the screw collar onto the canopy loop thus making canopy flush

3.) Align the rings to match the power points. (See Main Diagram) Attach the smaller ring to the hub using the longer chain and quick links provided. Attach the larger ring using the shorter chain & quick links provided. (Main Diagram) Connect all quick plugs. (Quick Connect plugs Detail) 4.) Bulb your fixture now, (bulbs provided by others). Place globes: first place finger ring onto globe(1), then insert both into fitter(2), screw fitter screws into fitter to hold globe(3). 5.) Attach sway chains to larger ring. Determine where sway hardware will be installed. Drive your hanger bolts into wall, place hardware onto hanger bolts, and screw acorn nuts onto hanger bolts. Attach sway chain from ring.(Sway Detail) 6.) Power on, enjoy your new fixture!



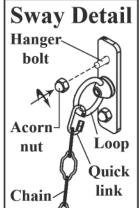

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009 MONDAY - FRIDAY 8:00a.m - 6:00p.m ET visit us on the web at www.meyda.com