ASSEMBLY INSTRUCTIONS FOR #48071 AP13

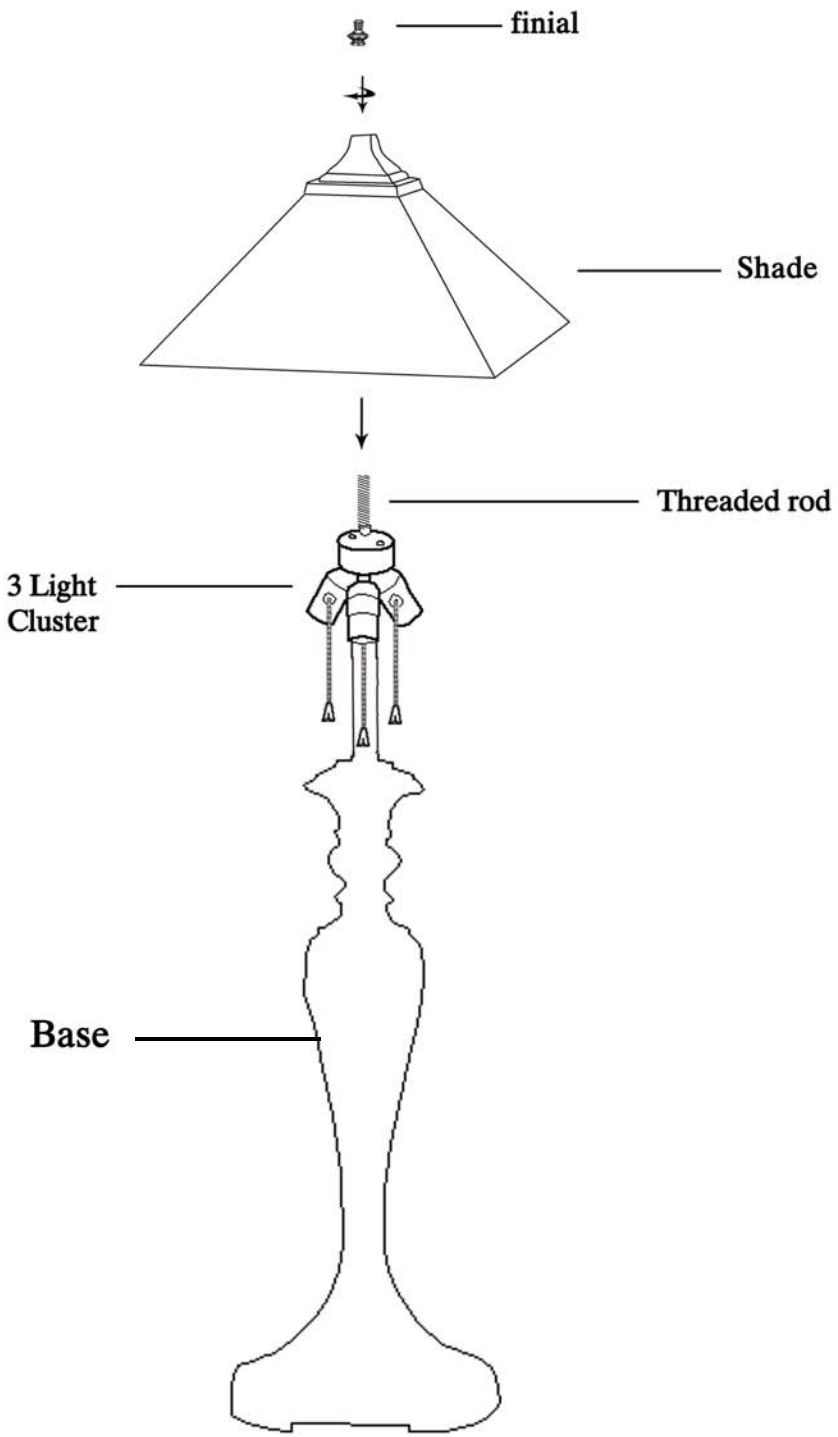

IMPORTANT

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Screw light cluster onto base.
2. Place shade onto threaded rod.
3. Screw finial onto threaded rod and tighten to shade.
4. Screw light bulbs into sockets.
5. Plug light into outlet and enjoy!

MEYDA TIFFANY

"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009
MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET
visit us on the web at www.meyda.com